

FRONT AND REAR AXLE KIT FOR THE CROSSMAX® UST® DISC WHEEL.

TOOLS NEEDED

- 1 x 5 mm Allen wrench.
- 1 x 10 mm Allen wrench.
- 1 hub wrench M40123.

Replacing the axle :

- 1** Remove axle end cap (on the adjustment nut side).
- 2** Insert the 10 mm Allen wrench on the adjustment nut side and the 5 mm Allen wrench on the opposite side.
- 3** Loosen the axle end screw.
- 4** Remove the axle and disassemble the adjustment nut , if necessary.
- 5** Replace the axle and mount the adjustment nut, if necessary.
- 6** Install the axle, after loosening the adjustment nut one turn with the axle end screw, using the 5 and 10 mm Allen wrenches.
Torque : 6 - 8 Nm.
- 7** Install axle end cap.
- 8** Adjust the bearing free play (install the wheel to the frame and put the bike down on the floor). The bearing free play can be adjusted using the hub wrench M40123 to turn the bearing adjuster nut against the bearing.
Repeat this operation if the adjustment doesn't seem to be optimum.

For adjusting the free play (see point 8 above).

