 
 


## Displaying the stored circumference

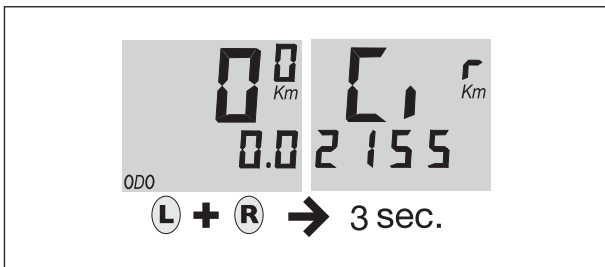 


With the «ODO» screen displayed, press the L and R buttons simultaneously to display the stored circumference. This value is displayed for 3 seconds.

## Programming a new circumference

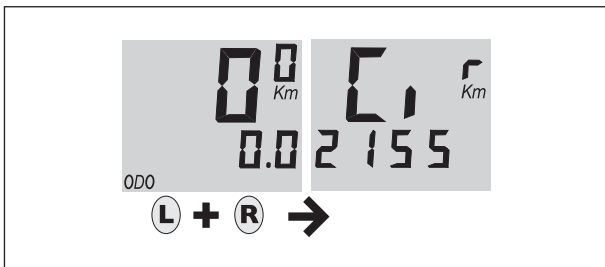

With the «ODO» screen displayed, press the L and R buttons simultaneously, and then release them. The circumference is displayed.

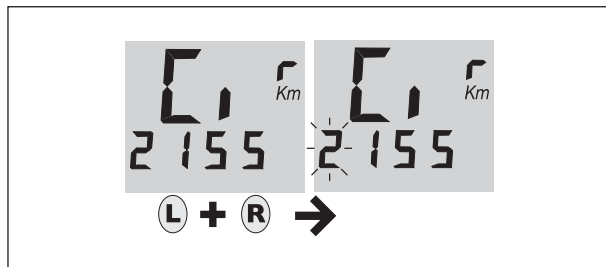

In the 3 seconds that follow, press the L and R buttons simultaneously again to display the «Cir» screen. You can now enter a new value by following the steps detailed above.

Changing the circumference value does not reset the odometer to zero.

It is thus possible to use two pairs of wheels with different diameters on the same bike, or to use your computer on two different bikes.