


**SPARE PARTS
REFERENCES**

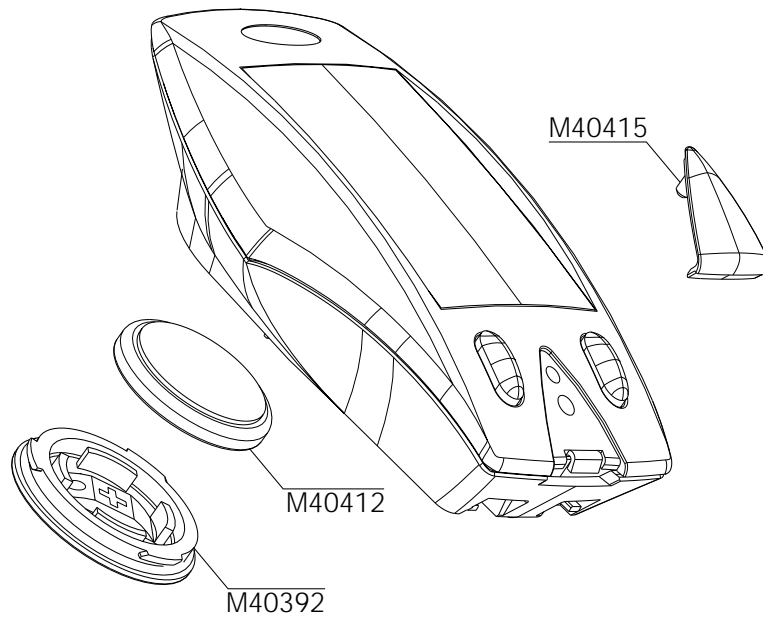

MAINTENANCE

TOOLS NEEDED :

- 1 flat screwdriver (5 mm blade).

Replacing the chrome embellisher :

- 1 Position the screwdriver blade under the rear part of the embellisher (base of the triangle) for leverage and unclip the embellisher.
- 2 Replace the embellisher.
- 3 Insert the mounting pin. Then clip the rear part of the embellisher on the computer.

Replacing the battery or battery cover :

- 1 Remove the battery cover by unscrewing counter clockwise (1/4 turn) with the new battery.
- 2 Insert the battery, + pole towards the outside.
- 3 Tighten the battery cover (1/4 turn) clockwise.

It is important to do the entire quarter turn to keep it waterproof.

ERRATUM

Despite all our efforts, we printed incorrect cassette codes described on the Mektronic instructions and in the 1998 Technical Manual. The following are the corrected codes. Please note this for all Mektronic references.

Cassette	Code
9 - 8 - 7 - 6 - 5 - 4 - 3 - 2 - 1	0
11 - 12 - 13 - 14 - 15 - 16 - 17 - 19 - 21	1
11 - 12 - 13 - 14 - 15 - 17 - 19 - 21 - 23	2
12 - 13 - 14 - 15 - 16 - 17 - 18 - 19 - 21	3
12 - 13 - 14 - 15 - 16 - 17 - 19 - 21 - 23	4
12 - 13 - 14 - 15 - 17 - 19 - 21 - 23 - 25	5
12 - 13 - 15 - 17 - 19 - 21 - 23 - 25 - 27	6
13 - 14 - 15 - 16 - 17 - 18 - 19 - 21 - 23	7
13 - 14 - 15 - 16 - 17 - 18 - 19 - 23 - 26	8