

## 1.2. INSTALLATION OF THE SENSOR SKEWER

1. Install the quick release skewer on the hub. Lever on the left (on the right if using with disc brakes).
2. Close the lever making sure it is oriented toward the back and is horizontal (+ or - 45 °).

### Regarding the adjustment force of the quick release skewers :

Tighten the adjustment nut to manipulate the skewer lever to the CLOSE position with sufficient force.

When the skewer lever can be moved to the CLOSE position too easily, the force locking the wheel is insufficient. Put the skewer lever in the OPEN position and tighten the adjustment nut to increase the locking force. Push the skewer lever to the CLOSE position.

If the locking force is too strong and the lever cannot be moved to the CLOSE position, put the lever in the OPEN position and loosen the adjustment nut to reduce the locking force. Then push the lever to the CLOSE position.

In any case, make sure the nut has been sufficiently tightened, so the end of the skewer axle is not more than 2 mm from the outside of the nut.

