

REAR BEARING KIT FOR THE KSYRIUM® ELITE WHEEL

Tools needed

- 2 x 5 mm Allen wrenches
- 1 hub wrench M40123
- Bearing pullers M40119 and M40373

- 1** Disassemble the complete axle kit and free wheel body kit by following the above procedures.
- 2** Remove the bearings on the free wheel side using the bearing press M40119 (long shank) and the bearings opposite the free wheel side using the bearing press M40373;
- 3** After cleaning the body, install the new bearings:
 - 3.1** On the free wheel side using the bearing press M40119;
 - 3.2** Opposite the free wheel side using the bearing press M40373;
- 4** Install the axle kit and free wheel body by following the procedure described above.

