

2.3.1. REAR BEARINGS ON THE SPEEDCITY™ WHEEL

Tools needed:

- 1 x 5 mm Allen wrench
- 1 x 16 mm flat wrench
- Bearing pullers M40373
- Bearing pullers M40119 (part D, see photo page 40)
- 1 hub wrench M40123

- 1** Remove the complete axle kit following procedure 2.1.1.
- 2** Drive out the bearing from the hub body using the bearing pullers M40119 (long shaft, see photo page 40)
- 3** After cleaning the hub body, mount the new bearing using the bearing pullers M40373 ;
- 4** Mount the axle kit and free wheel body following procedure 2.1.1.
- 5** Mount the wheel on the frame, tighten the quick release skewer, and adjust the bearing free play with the hub wrench M40123.

