



RESETTING TRIP FUNCTIONS

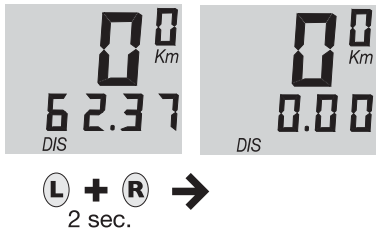

When in any screen (**except ODO**), press the L and R buttons simultaneously for 2 seconds to reset the Trip Distance (DIS), Stopwatch (RT), Average Speed (AV) and Maximum Speed (MX).

COMPLETE RESETTING

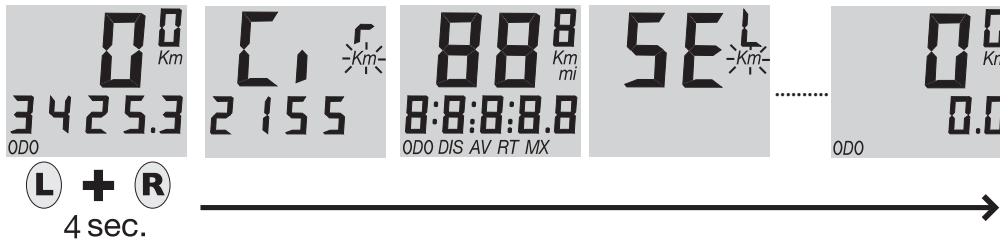

When in any screen, press the L and R buttons simultaneously for 4 seconds. This operation deletes all the data stored in the memory. You will have to completely re-program your computer by following the instructions from paragraph 4 onwards of this manual. This resetting operation can also be carried out in the event your computer malfunctions.